

English

Battery precautions

1. Do not use rechargeable batteries.
2. Use only alkaline AA batteries of the same or equivalent type.
3. Insert batteries with the correct polarity.
4. Keep batteries away from children.
5. Dispose of exhausted batteries according to local legal requirements. Do not dispose them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.
7. Remove batteries from the unit if it will not be used for a long period of time.
8. Exhausted batteries should be removed from the battery compartment to prevent over-discharging, which can cause leakage and may cause damage to the clock.

Getting started

Insert 2xAA new batteries as indicated in the battery compartment, and press the RESET key to reset the clock.

Function keys

- + key
- In normal display, press to switch between 12/24 hour format. In setting mode press to increase the setting value. Press and hold to speed up the setting.
- key
- In normal mode, press to switch between Month&Date/ Date&Month display. In setting mode, press to decrease the setting value. Press and hold to speed up the setting.

ALARM ON/OFF switch

- Slide to turn the alarm on / off.
- DATE SET/TIME SET/ALARM SET/LOCK switch
- Slide to "DATE SET" position to set the date.
- Slide to "TIME SET" position to set the time.
- Slide to "ALARM SET" position to set the alarm time.
- Slide to "LOCK" position to return to normal mode.

°C/F key

- In normal mode, press to switch between °C/F

RESET key

- Press by using a pin to reset all values to default. In case of a malfunction, the unit has to be reset.

Product description (Image 1)

1. LCD display
2. DATE SET/TIME SET/ALARM SET/LOCK switch
3. + key
4. - key
5. ALARM ON/OFF switch
6. °C/F key
7. RESET key
8. Wall mounting holder
9. Folding table stand
10. Battery compartment

Display symbols (Image 2)

- A. Time
- B. Alarm time
- C. Alarm icon
- D. Day of the week
- E. Indoor temperature
- F. Indoor humidity

Setting the time

1. In normal mode, slide the "DATE SET/TIME SET/ALARM SET/LOCK switch to "TIME SET" position to enter the time setting mode time.
2. Press "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.
3. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

Calendar setting

1. In normal mode, slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

2. Press "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

3. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

Calendar setting

1. In normal mode, slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

2. Press "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

3. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

4. Press the RESET key to reset the clock.

5. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

6. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

7. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

8. Press the RESET key to reset the clock.

9. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

10. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

11. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

12. Press the RESET key to reset the clock.

13. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

14. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

15. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

16. Press the RESET key to reset the clock.

17. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

18. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

19. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

20. Press the RESET key to reset the clock.

21. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

22. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

23. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

24. Press the RESET key to reset the clock.

25. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

26. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

27. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

28. Press the RESET key to reset the clock.

29. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

30. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

31. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

32. Press the RESET key to reset the clock.

33. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

34. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

35. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

36. Press the RESET key to reset the clock.

37. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

38. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

39. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

40. Press the RESET key to reset the clock.

41. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

42. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

43. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

44. Press the RESET key to reset the clock.

45. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

46. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

47. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

48. Press the RESET key to reset the clock.

49. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

50. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

51. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

52. Press the RESET key to reset the clock.

53. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

54. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

55. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

56. Press the RESET key to reset the clock.

57. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

58. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

59. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

60. Press the RESET key to reset the clock.

61. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

62. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

63. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

64. Press the RESET key to reset the clock.

65. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

66. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

67. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

68. Press the RESET key to reset the clock.

69. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

70. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

71. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

72. Press the RESET key to reset the clock.

73. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

74. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

75. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

76. Press the RESET key to reset the clock.

77. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

78. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

79. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

80. Press the RESET key to reset the clock.

81. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

82. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

83. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

84. Press the RESET key to reset the clock.

85. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

86. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

87. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

88. Press the RESET key to reset the clock.

89. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

90. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

91. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

92. Press the RESET key to reset the clock.

93. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

94. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

95. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

96. Press the RESET key to reset the clock.

97. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

98. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

99. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

100. Press the RESET key to reset the clock.

101. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.

102. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

103. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.

104. Press the RESET key to reset the clock.

105. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting

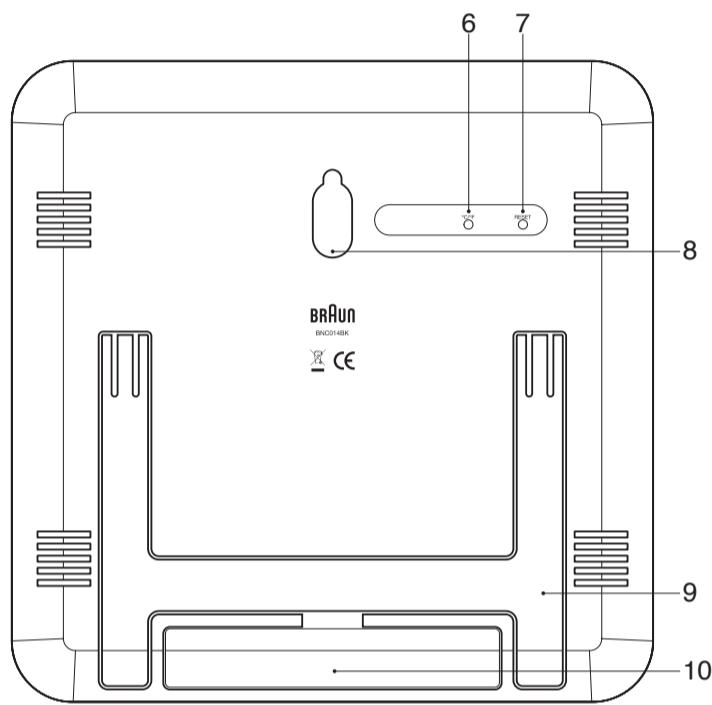
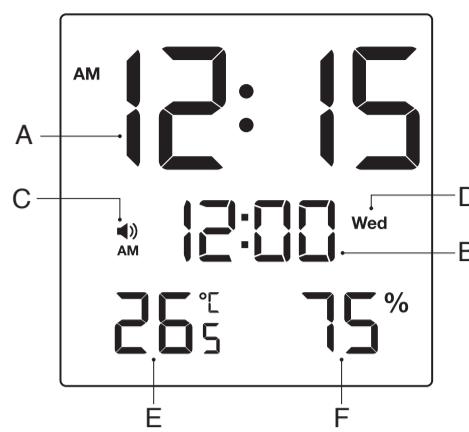
106. Press the "+" / "-" key to adjust the desired value. Press and hold to speed up the setting.

107. Slide the "DATE SET/TIME SET/OFF/ALARM SET/LOCK to "LOCK" position to save the setting and return to normal mode.</

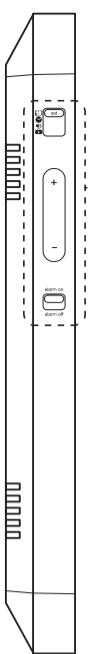
1.



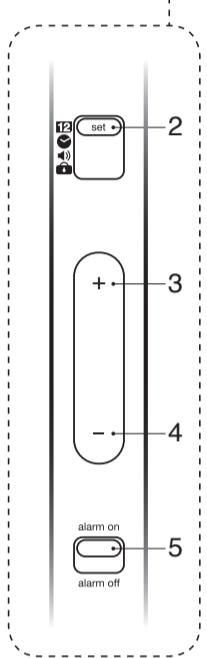
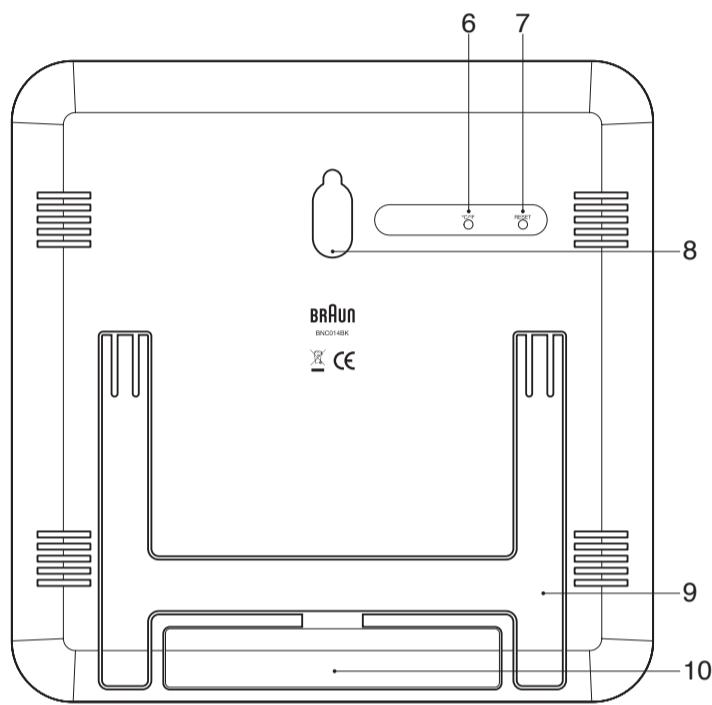
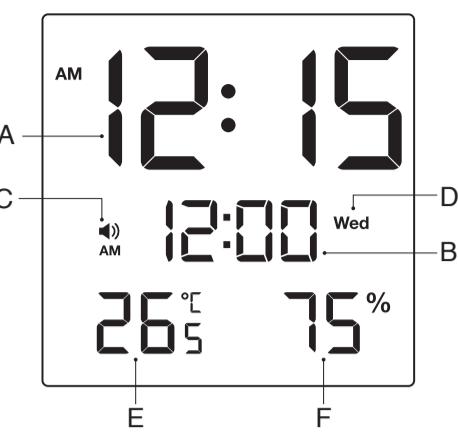
2.

**BRAUN****BNC014**
Wall clock**Wanduhr****Horloge murale****English**
User instructions
Guarantee**Deutsch**
Gebrauchsanweisung
Garantie**Français**
Mode d'emploi
Garantie

1.



2.

**BRAUN**

BNC014
Orologio da parete
Wandklok
Vægur

Italiano
 Manuale di istruzioni
 Garanzia

Nederlands
 Gebruiksaanwijzingen
 Garantie

Dansk
 Brugervejledninger
 Garanti

Italiano

Batterie

- Non usare batterie ricaricabili.
- Usare solo batterie alcaline AA dello stesso tipo o equivalenti.
- Le batterie devono essere inserite correttamente prestando attenzione alla polarità.
- Tenere le batterie lontano dai bambini.
- Le batterie scariche vanno trattate secondo le normative locali. Non devono pertanto essere gettate assieme ai normali rifiuti domestici.
- Evitare corti circuiti tra i contatti nel vano batterie e i terminali della batteria.
- Rimuovere le batterie dall'unità se non vengono utilizzate per un lungo periodo di tempo.
- Le batterie scariche devono essere rimosse dal vano batteria per evitare emissioni/perdite che possono causare danni alla sveglia.

Installazione delle batterie

Inserire 2 batterie nuove tipo AA come indicato nel comparto, premere il tasto "RESET" per resettare la sveglia.

Tasti di funzione:

Tasto +
- In visualizzazione normale, premere per passare al formato 12/24 ore. Nella modalità di impostazione premere per aumentare il valore. Tenere premuto per accelerare. l'impostazione.

Tasto -

- Nella modalità normale, premere per passare alla visualizzazione Mese&Giorno / Giorno&Mese. Nella modalità di impostazione premere per diminuire il valore. Tenere premuto per accelerare l'impostazione.

Tasto ALARM ON/OFF

- Premere il tasto ON/OFF per impostare o spegnere l'allarme.

Tasto IMPOSTAZIONE DATA/ORA/ALLARME/BLOCCO

- Scorrere fino alla posizione "DATE" per impostare la data.

- Scorrere fino alla posizione "TIME" per impostare l'ora.

- Scorrere fino alla posizione "ALLARME" per impostare l'allarme

- Scorrere fino alla posizione "LOCK" per tornare alla modalità normale.

°C/F key

- Nella modalità normale, premere per passare a °C/°F

Tasto RESET

- Premere utilizzando uno spillo o un oggetto appuntito per ripristinare tutti i valori predefiniti. In caso di malfunzionamento, l'unità deve essere resettata.

Descrizione (figura 1)

- Display LCD
- Tasto impostazione DATA/ORA/ALLARME/BLOCCO
- Tasto +
- Tasto -
- Tasto ALLARME ON/OFF (ACCESO/SPENTO)
- Tasto °C/F
- Tasto per RESETTARE
- Supporto di montaggio a parete
- Supporto da tavolo pieghevole
- Vano batteria

Simboli del display (figura 2)

- Ora
- Allarme
- Icona allarme
- Giorno della settimana
- Temperatura interna
- Umidità interna

Impostazione manuale dell'ora

Se la sveglia non riceve bene il segnale RC oppure è stata spenta la funzione RC, è possibile impostare l'ora manualmente. Non appena il segnale del trasmettitore viene nuovamente ricevuto, l'orologio automaticamente si sincronizza con l'ora ricevuta.

1 . Nella modalità normale, scorrere il pulsante "DATA/ORA/ALLARME/BLOCCO" nella posizione "ORA" per accedere alla modalità di impostazione dell'ora.

2 . Premere il tasto "+" / "-" per impostare il valore desiderato.

3. Tasto di funzione

- Tryk i normal visning for at skifte mellem 12/24 timers format.

I indstillingssmodus trykkes for at øge indstillingens værdien. Tryk og hold for at fremskynde indstillingen.

- tast

- I normal mod trykkes der for at skifte mellem Måned&dato/ Dato&måned visning. I indstillingssmodus trykkes for at reducere indstillingens værdien. Tryk og hold for at fremskynde indstillingen.

ALARM ON/OFF-kontakt

- Skub for at slå vækkeuret til/fra.

DATE SET/TIME SET/ALARM SET/LOCK-kontakt

- Skub til "DATE SET" for at indstille dato'en.

- Skub til "TIME SET"-position for at indstille klokkeslettet.

- Skub til "ALARM SET"-position for at indstille vækketidspunktet.

- Skub til "LOCK"-position for at vende tilbage til normal mode.

°C/F tast

- I normal mode trykkes for at skifte mellem °C/F

RESET-tast

- Tryk ved hjælp af en nål for at nulstille alle værdier til standard. I tilfælde af fejlfunktion skal enheden nulstilles.

Produktbeskrivelse (Billed 1)

- LCD-skærm
- DATE SET/TIME SET/ALARM SET/LOCK-kontakt
- + tast
- tast
- ALARM ON/OFF-kontakt
- °C/F tast
- RESET-tast
- Vægmonteringsbeslag
- Foldebordsstativ
- Batterirum

Visningssymbolet (Billed 2)

- Tid
- Vækningstid
- Vækningsikon
- Ugedag
- Indendørs temperatur
- Indendørs luftfugtighed

Manuel tidsindstilling

Hvis uret ikke modtager RC-tidssignalen, eller du slukker for RC-funktionen, kan du indstille tiden manuelt. Så snart transmittersignalen modtages igen, vil uret automatisk synkronisere med den modtagne tid.

1. I normal mod, skubbes "DATE SET/TIME SET/ALARM SET/LOCK" kontakten til "TIME SET" positionen for at indstille tiden i tidsindstillingssmodus.

2. Tryk på "+" / "-" tasten for at indstille den ønskede værdi. Tryk og hold for at fremskynde indstillingen.

3. Skub "DATE SET/TIME SET/ALARM SET/LOCK" til "LOCK" po-

sition for at gemme indstillingen og vende tilbage til normal mode.

6.

Tenere premuto per velocizzare l'impostazione.
3. Scorrere il pulsante "DATA/ORA/ALLARME/BLOCCO" nella posizione "BLOCCO" per salvare le impostazioni e tornare alla modalità normale.

Impostazione del calendario

1. In modalità normale, far scorrere il tasto "DATA / ORA / ALLARME / BLOCCO" nella posizione "DATA" per accedere alla modalità di impostazione della data.

2. Premere il tasto "+" / "-" per impostare il valore desiderato. Tenere premuto per accelerare l'impostazione.

3. Far scorrere il tasto "DATA / ORA / ALLARME / BLOCCO" per passare alla posizione "BLOCCO" per salvare l'impostazione e tornare alla modalità normale.

Impostazione dell'allarme

1 . Nella modalità normale far scorrere il tasto "DATA/ORA/ALLARME/ BLOCCO" nella posizione "ALLARME" per accedere all'impostazione dell'allarme.

2. Premere il tasto "+" o "-" per impostare il valore desiderato. Tenere premuto per accelerare l'impostazione.

3. Scorrere il pulsante "DATA/ORA/ALLARME/BLOCCO" nella posizione "BLOCCO" per salvare le impostazioni e tornare alla modalità normale.

Utilizzo dell'allarme

1. Impostare l'allarme come descritto nella sezione precedente.

2. Far scorrere il tasto "ALLARME ON/OFF" nella posizione "ALLARME ON". L'icona a forma di campana apparirà sul display LCD.

3. Far scorrere il tasto "ALLARME ON / OFF" nella posizione "ALARM OFF" per disattivare l'allarme. L'icona della campana scomparirà.

Nota:

Quando suona l'allarme, essa si fermerà automaticamente dopo 60 secondi. L'allarme suonerà nuovamente alla stessa ora del giorno seguente se non verrà spenta.

Sostituzione della batteria

Quando la luce del display LCD diventa fioca, sostituire ed inserire 2 nuove batterie AA.

Nota: L'esposizione in ambienti elettrostatici può causare il resettamento della sveglia.

In questo caso seguire le istruzioni come descritto in questo manuale per impostare nuovamente la sveglia.

Garanzia

Due anni di garanzia contro i difetti di materiale e di fabbricazione (ad eccezione della batteria). La garanzia è valida nei paesi in cui la sveglia è ufficialmente in vendita.

I vetri/lenti rotti o scalfiti non sono coperti da garanzia.



Contatti Braun

Per qualsiasi problema o informazione, contattare il centro servizi locale sul sito:

www.braun-clocks.com

www.braun-watches.com

oppure contattare il numero +44 208 208 1833



ATTENZIONE! Questo prodotto è coperto dalla direttiva Waste Electrical and Electronic Equipment (WEEE). Non deve essere eliminato con i normali rifiuti domestici ma portato presso il vostro centro locale di raccolta per il riciclaggio.

Braun è un marchio registrato di Braun GmbH, Kronberg, Germania utilizzato su licenza da Zeon Ltd.

Nederlands

Voorzorgsmaatregelen batterijen

1. Geen oplaadbare batterijen gebruiken

2. Gebruik alleen alkaline AA-batterijen van hetzelfde of gelijkwaardig type.

3. Plaats de batterijen met de juiste polariteit.

4. Batterijen buiten bereik van kinderen houden.

5. Leg de batterijen volgens de plaatselijke wettelijke vereisten weggoeden. Gooi ze niet weg bij het gewone huishoudelijke afval.

6. Voorkom kortsluiting van de contacten in het batterijcompartiment en batterijpolen.

7. Verwijder de batterijen uit het apparaat als deze langere tijd niet wordt gebruikt.

8. Lege batterijen moeten worden verwijderd uit het batterijcompartiment om overtuigende ontlasting te voorkomen, dit kan leiden tot lekkage en kan schade aan de klok veroorzaken.

Aan de slag

Plaats 2 nieuwe AA-batterijen in het batterijcompartiment zoals aangegeven en druk op de RESET-knop om de klok te resetten.

Functieknopen

+ knop

- Indrukken bij de normale weergave om te schakelen tussen het 12/24 uur-formaat. Indrukken bij de instellingsmodus om de ingestelde waarde te verhogen. Vasthouden om de instelling te verslepen.

- knop

- Indrukken bij de normale modus om te schakelen tussen Maand&Dag / Dag&Maand-weergave. Indrukken bij de instellingsmodus om de ingestelde waarde te verlagen. Vasthouden om de instelling te verslepen.

ALARM ON/OFF-schakelaar

- Verschuiven om de wekker aan/uit te schakelen.

DATE SET/TIME SET/ALARM SET/LOCK-schakelaar

- Schuif naar de "DATE SET"-positie om de datum in te stellen.

- Schuif naar de "TIME SET"-positie om de tijd in te stellen.

- Schuif naar de "ALARM SET"-positie om de wekketijd in te stellen.

- Schuif naar de "LOCK"-positie om terug te keren naar de normale modus.

°C/F-knop

- Indrukken bij de normale modus om te schakelen tussen °C/°F.

RESET-knop

- Indrukken met behulp van een pen om alle waarden weer op de fabrieksstand in te stellen. In het geval van een storing, moet het apparaat worden gereset.

Productbeschrijving (Afbeelding 1)

- LCD-scherm
- DATE SET/TIME SET/ALARM SET/LOCK -schakelaar
- + knop
- knop
- ALARM ON/OFF-schakelaar
- °C / °F-knop.
- RESET-knop
- Houder muurbevestiging
- Inklapbare tafelstaander
- Batterijcompartiment

Displaysymbolen (Afbeelding 2)

- | | |
|------------------|----------------------------|
| A. Tijd | D. Dag van de week |
| B. Wekketijd | E. Binnentemperatuur |
| C. Wekkersymbool | F. Vochtigheid binnenshuis |

Instellen van de tijd

Als de klok er niet in slaagt een RC-tijdsignal te ontvangen of de RC-functie staat uit, kunt u de tijd handmatig instellen. Zodra het signaal van de zender weer wordt ontvangen, wordt de klok automatisch gesynchroniseerd met de ontvangen tijd.

1. Schuif in normale modus door "DATE SET/TIME SET/ ALARM SET/LOCK"-schakelaar naar de "TIME SET"-positie om de tijdstellingssmodus te activeren.

2. Druk op de "+" of "-" knop om de gewenste tijd in te stellen.

Vasthouden om de instelling te verslepen.

3. Schuif de "DATE SET/TIME SET/ALARM SET/LOCK" in de "LOCK"-positie om de wijziging op te slaan en terug te keren naar de normale modus.

3.

Kalender instellen

1. Schuif in normale modus door "DATE SET/TIME SET/ ALARM SET/LOCK"-schakelaar naar de "DATE SET"-positie om de datuminstelling te activeren.

2. Druk op de "+" of "-" knop om de gewenste tijd in te stellen.

Vasthouden om de instelling te verslepen.

3. Schuif de "DATE SET/TIME SET/ALARM SET/LOCK"-schakelaar in de "LOCK"-positie om de wijziging op te slaan en terug te keren naar de normale modus.