

# BRAUN

creation satin ions

CI 1900 DF • CI 1900





## Braun Infolines



Deutsch	4, 5
English	5, 6
Français	7, 8
Español	8, 9
Português	10, 11
Italiano	11, 12
Nederlands	13, 14
Dansk	14, 15
Norsk	16, 17
Svenska	17, 18
Suomi	19, 20
Polski	20, 21
Český	22, 23
Slovenský	24, 25
Hrvatski	26, 27
Slovenski	27, 28
Magyar	29, 30
Türkçe	30
Ελληνικά	32, 33
Русский	33, 35
Українська	36, 37
عربي	40, 38

(D) (A)	00 800 27 28 64 63 00 800 BRAUNINFOLINE
(GH)	08 44 - 88 40 10
(GB)	0800 783 70 10
(IRL)	1 800 509 448
(F)	0 810 309 780
(B)	0 800 14 592
(E)	901 11 61 84
(P)	808 20 00 33
(I)	(02) 6 67 86 23
(NL)	0 800-445 53 88
(DK)	70 15 00 13
(N)	22 63 00 93
(S)	020 - 21 33 21
(FIN)	020 377 877
(PL)	0 801 127 286 0 801 1 BRAUN
(CZ)	221 804 335
(TR)	0 212 473 75 85
(RUS)	+7 495 258 62 70
(UA)	+38 044 428 65 05
(HK)	852-25249377 (Audio Supplies Company Ltd.)

### Internet:

[www.braun.com](http://www.braun.com)

Braun GmbH  
Frankfurter Straße 145  
61476 Kronberg / Germany

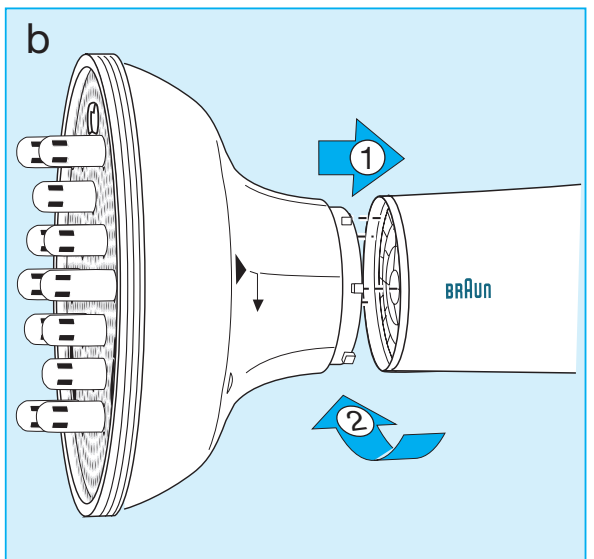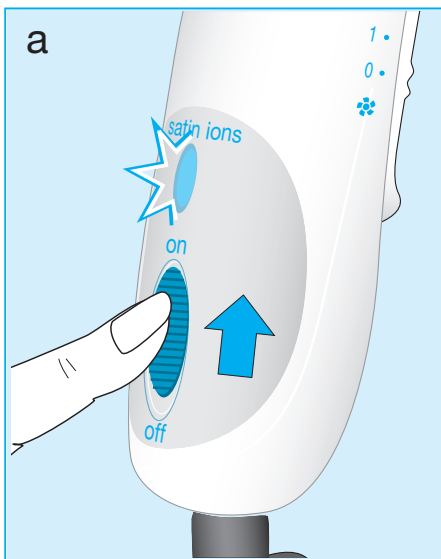


# Deutsch

Unsere Produkte werden hergestellt, um höchste Ansprüche an Qualität, Funktionalität und Design zu erfüllen. Wir wünschen Ihnen mit Ihrem neuen Braun Haartrockner viel Freude.

Gebrauchsanweisung vor Inbetriebnahme sorgfältig durchlesen.



## Wichtig

- Schließen Sie das Gerät nur an Wechselspannung (~) an und prüfen Sie, ob Ihre Netzspannung mit der Spannungsangabe auf dem Gerät übereinstimmt.
-  Dieses Gerät darf nicht in der Nähe von mit Wasser gefüllten Behältern wie z.B. Badewanne, Dusche, Waschbecken verwendet werden. Achten Sie darauf, dass das Gerät nicht nass wird.
- Ziehen Sie immer den Netzstecker, wenn das Gerät nicht in Gebrauch ist. Die Nähe von Wasser stellt eine Gefahr dar, auch wenn das Gerät ausgeschaltet ist.
- Als zusätzlicher Schutz wird die Installation einer Fehlerstrom-Schutzeinrichtung (RCD) mit einem Bemessungsauslösestrom von nicht mehr als 30 mA im Badezimmer-Stromkreis empfohlen. Fragen Sie Ihren Installateur um Rat.
- Bei Überlastung – zum Beispiel durch Verdecken der Luftansaug- bzw. der Auslassöffnungen mit Fusseln und Haaren – schaltet sich der Haartrockner aus und nach einer Abkühlzeit von wenigen Minuten wieder ein. Um ein unbeaufsichtigtes Wiedereinschalten zu vermeiden, stellen Sie den Schalter auf «0» = aus.
- Wickeln Sie das Netzkabel nicht um das Gerät. Überprüfen Sie es gelegentlich auf Schadstellen. Ist das Netzkabel beschädigt, muss es durch eine vom Hersteller benannte Reparaturwerkstatt ersetzt werden, um Gefährdungen zu vermeiden.
- Kinder oder Personen mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten dürfen dieses Gerät nicht benutzen, es sei denn, sie werden durch eine für ihre Sicherheit zuständige Person beaufsichtigt. Grundsätzlich raten wir aber, das Gerät von Kindern fern zu halten.

## Gerätebeschreibung

- ① Schalter
- ② Ionen-Schalter
- ③ Ionen-Leuchte
- ④ Taste für die Kaltstufe
- ⑤ Sicherheitsfilter
- ⑥ Luftstromrichtdüse
- ⑦ Diffusor-Aufsatz (nur bei Modell CI 1900 DF)

## Schalterstellungen ①

		
0	aus	
1	schonendes Trocknen	1-2
2	schnelles Trocknen	3
1	Styling	3

## «satin ion» Technologie

Ein kraftvoller Strom unsichtbarer Ionen umschließt jedes einzelne Haar. Die Haaroberfläche wird glatter und die statische Aufladung wird reduziert. Das Haar entfaltet seine natürliche Schönheit und seidigen Glanz.

- Schieben Sie den Ionen-Schalter ② auf die «on» Position. Nach dem Einschalten des Haartrockners leuchtet die Ionen-Leuchte ③ und zeigt an, dass Ionen erzeugt werden (a).
- Um optimale Ergebnisse mit der Ionen-Funktion zu erzielen, benutzen Sie den Haartrockner ohne Aufsatz.
- Die Wirkung der Ionen ist bei der Anwendung in einer Umgebung mit hoher Luftfeuchtigkeit weniger sichtbar.

## Optimales Styling mit der «satin ion» Technologie

Wenn Sie Ihr Haar mit einem Aufsatz trocknen, nehmen Sie für das Stylen den Aufsatz ab, um mit dem maximalen Ionenstrom das Haar geschmeidiger, glänzender und gesünder aussehen zu lassen.

## Kaltstufe ④

Zum Fixieren der Frisur mit kalter Luft, betätigen Sie die Taste für die Kaltstufe.

## Sicherheitsfilter ⑤

Filter regelmäßig trocken abwischen. Bei starker Verunreinigung Filter abnehmen und mit Wasser reinigen.

## Luftstromrichtdüse ⑥

Für gezieltes Styling benutzen Sie die Luftstromrichtdüse.

## Diffusor-Aufsatz ⑦ (nur bei Modell CI 1900 DF) Anbringen des Diffusor-Aufsatzes (b)

- Richten Sie die Erhebungen auf dem Aufsatz mit den Aussparungen am Haartrockner aus.
- Diffusor aufsetzen und im Uhrzeigersinn drehen, bis der Bajonettverschluss einrastet.
- Zum Abnehmen den Aufsatz in die umgekehrte Richtung drehen und abziehen.

## Volumen-Styling

- Kurzes bis mittellanges Haar:  
Sie erhalten Volumen und Stand am Haar-

## English

ansatz, indem Sie den Diffusor in kleinen kreisenden Bewegungen über den Kopf führen. Gehen Sie dabei abschnittsweise vor.

- **Langes Haar:**

Trocknen Sie zunächst die Haarspitzen, indem Sie sie partieweise auf die Fingerplatte legen. Führen Sie dann jede einzelne Partie mit dem Diffusor an den Kopf heran und verweilen Sie dort. Um Stand am Haaransatz zu erzeugen, bewegen Sie die Diffusor-Finger leicht kreisend über die Kopfhaut.

Änderungen vorbehalten.

Dieses Gerät entspricht den EU-Richtlinien EMV 2004/108/EG und Niederspannung 2006/95/EC.



Dieses Gerät darf am Ende seiner Lebensdauer nicht mit dem Hausmüll entsorgt werden. Die Entsorgung kann über den Braun Kundendienst oder lokal verfügbare Rückgabe- und Sammelsysteme erfolgen.



### Garantie

Als Hersteller übernehmen wir für dieses Gerät – **nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer** – eine Garantie von 2 Jahren ab Kaufdatum. Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen. Die Garantie kann in allen Ländern in Anspruch genommen werden, in denen dieses Braun Gerät von uns autorisiert verkauft wird.

Von der Garantie sind ausgenommen: Schäden durch unsachgemäßen Gebrauch, normaler Verschleiß und Verbrauch sowie Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen. Bei Eingriffen durch nicht von uns autorisierte Braun Kundendienstpartner sowie bei Verwendung anderer als Original Braun Ersatzteile erlischt die Garantie.


Im Garantiefall senden Sie das Gerät mit Kaufbeleg bitte an einen autorisierten Braun Kundendienstpartner. Die Anschrift für Deutschland können Sie kostenlos unter 00800/27 28 64 63 erfragen.

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance.

Carefully read the use instructions before use.

---

### Important



- Plug your hairdryer into an alternating current (~) outlet only and be sure that your household voltage corresponds to the voltage marked on the hairdryer.
-  This appliance must never be used near water (e.g. a filled wash basin, bathtub or shower). Do not allow the appliance to become wet.
- When using the hairdryer in a bathroom, always unplug it after use. Even a switched-off hairdryer presents a hazard if not unplugged.
- For additional protection, it is advisable to install a residual current device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your installer for advice.
- Care should be taken not to block the inlet and outlet grill when the hairdryer is switched on. If either grill becomes blocked, the hairdryer will automatically cut out. After cooling for a few minutes, it will switch back on automatically.
- Do not wrap the mains cord around the appliance. Regularly check the mains cord for wear or damage, particularly where it enters the product and the plug. If you have any doubt about its condition take the appliance to your nearest Braun Service Centre for checking/repair. The mains cord of the appliance may only be replaced by an authorised Braun Service Centre. Unqualified repair work can lead to extreme hazards for the user.
- This appliance is not intended for use by children or persons with reduced physical or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children.

---

### Description

- ① Switch
- ② Ion activator
- ③ Ion light
- ④ Cold shot button
- ⑤ Protection filter
- ⑥ Concentrator nozzle
- ⑦ Diffusor attachment (CI 1900 DF only)

## Switch settings ①

		
0	off	
1	gentle drying	1-2
2	fast drying	3
1	styling	3

## «satin ion» Technology

The «satin ion» Technology produces a rich stream of satin ions that hug every single hair.

The ions calm hair, reducing frizz and static to reveal your hair's natural beauty and shine.

- Slide the ion activator ② to the «on» position. When hairdryer is in operation, the ion activator lights up to show that ions are generated. (a)
- To obtain optimal results with the ionic function, use the hairdryer without attachments.
- The effect of ions is less apparent when used in high humidity environment.

## Optimal styling with the «satin ion» Technology

If drying with attachment, finish styling without attachment to ensure maximum flow of ions and a smoother, shinier, healthier looking result.

## Cold shot ④

To fix a style with cold air, press the cold shot button.

## Protection filter ⑤

Regularly wipe the filter clean. For a thorough cleaning, remove the filter and clean it under running water.

## Concentrator nozzle ⑥

For precise styling use the concentrator nozzle.

## Diffusor attachment ⑦ (model CI 1900 DF only)

### Attaching the diffusor (b)

- Align the notches on the rim of the diffusor attachment with the slots in the hair dryer.
- Push the attachment onto the hairdryer, then turn clockwise until the bayonet lock clicks into place.
- To remove the diffusor, turn in the opposite direction and pull.

## Volume styling

- Short to mid-length hair:  
To add volume and root lift, gently guide the diffusor fingers with a small circular motion over your scalp. Continue section by section.

- Long hair:  
First dry hair ends by placing them onto the finger plate. Then, with the diffusor, carefully lift the hair to your head and hold. Finish off the roots with a gentle circular movement of the diffusor fingers on the scalp to add some lift.

Subject to change without notice.

This product conforms to the European Directives EMC 2004/108/EC and Low Voltage 2006/95/EC.



Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at Braun Service Centre or at appropriate collection points provided in your country.



## Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

## For UK only:

This guarantee in no way affects your rights under statutory law.